

Multi-Task

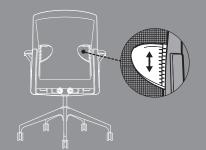

#### Adjustable Lumbar

SAVA lumbar pads are independently adjustable from the seated position and offer a 4" range. The two-part plastic and urethane structure provides flexing support without creating pressure points. If you prefer, these pads may simply be removed and stored for later use.

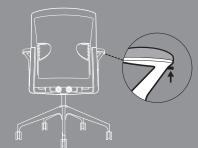

### Arm Height and Angle

To adjust height, depress lever beneath cap and move to desired height. Arm cap may also be rotated laterally for increased support.

**Multi-Task** 





## Tilt Lock

Shift weight away from back and pull lever upward to lock the tilt function. Shift weight away from back and push lever downward to permit the tilt function.

## Seat Height

To raise seat height, remove weight from seat while pulling paddle upward. To lower, remain seated while pulling paddle upward.

# Seat Depth

Lift lever and slide weight forward to increase depth and rearward to decrease it.

# Tilt Tension

Shift weight away from back and pull lever outward to decrease tension. Push lever inward to increase tension. There are four distinct positions.





#### Fine tuning tension adjustment

Fine tuning is located at the rear of the mechanism beneath the seat. To increase tension at the higher end of the range, rotate both knobs clockwise according to individual preference. To decrease tension at the lower end of the range, only the right knob need be rotated counter-clockwise to the degree required. The entire range of adjustment, through all four settings, will be shifted to higher or lower levels of tension by turning both knobs together clockwise or counter-clockwise.

