STYLEX Model: Dela Guest Armless *Refer to P.2 for model variations

Tools Required

Safety Glasses 1/8" Allen Wrench Phillips Screwdriver





Disassembly and Recycling Document

Disassembly Time: 5min / No Special Training Required




Breakdown Steps

1. Turn the chair on its back to reveal the tabs on the frame and screws. Start by using a 1/8 allen key to remove the 10-24 flat head screws in the seat wood (green). This will allow you to remove the seat pad. Leave the 1/4-20 button head screws in place for now. (red) (figure A1).



2. Set the chair back on its feet. With the seat pad removed, grip the underside of the back pad and pull upwards to slide it out of the clips holding it in place. This may require two people. Using the 1/8" allen key remove the two 10-24 screws (red) holding the back wood to the frame. (figure B1)

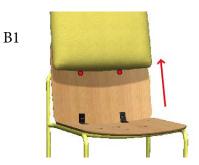

 Finally, turn the chair on its back to remove the 4, 1/4-20 button head screws from the metal tabs of the frame (red). This will free the frame from the wood contruction of the chair. (figure C1)



Seat and BackMaterial:Greenguard certified plywood



- Upholstered Pads
- Materials: CVC Free Polyurethane foam, Greenguard certified plywood






- Hex flat head (1/8 bolt)
- Material: Steel
- Phillips Flat head (1/4 20 bolt)
- Material: Steel
- Seat Bracket
- Material: Steel




- Material: Steel
- Glides
- Material: Nylon
- Casters (Task Only)

ŝ

- Material: Steel, Nylon

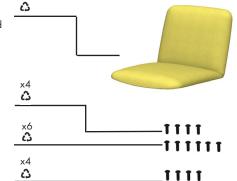

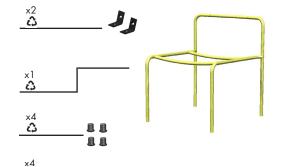

STYLEX Model: Dela

Chair Variations

Dela Product Line

All Dela chairs have various options for upholstery and base options: (Pictured Fully Upholstered)

- Dela Guest with Arms (figure A1).
- Dela Task with Casters (figure A2).
- Dela Counter Stool (figure A3).
- Dela Bar Stool (figure A4).
- Dela Lounge with Arms (figure A5).
- Dela Lounge Armless (figure A6).

Disassembly for all of these versions is fairly similar to the original. Please use P1 as a disassembly reference for all of these variations.

Û

All bases can be recycled



There is the option of upholstered and wood (pictured) armcaps:

- -To remove the upholstered cap use a 1/8" allen wrench to unscrew the flat head screws located underneath the armcap.
- -The wood caps are attached with 3M VHB tape.

Disassembly and Recycling Document

Disassembly Time: 5min / No Special Training Required

